



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | Power |  | Power |
|  | (*) |  | Subt |
|  | [≡] |  | Text |
|  | O |  | TV/R |
|  | [+]/◆ |  | Info |
|  | ? |  | Options |
|  | I-II/[≡i] |  | Dual |
|  | 16:9/+ |  | Format |
|  | (<>)/X |  | Exit |
|  | Inst |  | Smart |
|  | Input |  | AV |
|  | P<P |  | Pre Ch |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------|
|  | Left |  | Left |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Menu |  | Menu |
|  | Red/Picture |  | Red |
|  | Green/Audio |  | Green |
|  | Yellow/Timer |  | Yellow |
|  | Blue/Headphon |  | Blue |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|----|------|----------------|------|
| 0 | 0 | 0 | 0 |
| PP | PP | RETURN BACK | Back |
| | Mute | MUTE | Mute |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

