
 

 

 



 

 









 

 

 

 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/SAT		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Media
	FAV		Pre Ch
	Menu		Menu
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	CH&Page+		Ch +
	CH&Page-		Ch -
	Red / TTX		Red
	Red / TTX		Text
	Green / Sub.T		Green
	Green / Sub.T		Subt
	Yellow / Zoom		Yellow
	Yellow / Zoom		Eject





Originalfernbedienung Ersatzfernbedienung

	Blue / MP		Blue
	TV/Radio		TV/R
	Audio		Dual
	Pause		Pause
	POS		Format
	Rec		Rec
	Info		Info
	P/N		3D
	T/S		AV

Originalfernbedienung Ersatzfernbedienung

