








 






 

 
 



 
 


 

 


 
 



**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Add / Clear		Exit
	<<		<<
	>>		>>
	Pause		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Navigat		Smart
	Title		List
	Menu		Menu
	Subtitle		Subt
	Angle		Format
	Source		AV
	Rec		Rec







Originalfernbedienung Ersatzfernbedienung

TIMER	Timer	 + 	Shift + AV
EDIT	Edit		Media
USB	USB		Red
DVD	DVD		Green
HDD	HDD		Yellow
DISC OPER	Disc Oper		D. Menu
SLOW	Slow	 + 	Shift + Pause
RETURN	Return		Back
REPEAT	Repeat		Text
ZOOM	Zoom	 + 	Shift + Eject
CH+	CH+		Ch +
CH-	CH-		Ch -
P/N	P/N		TV/R
AUDIO	Audio		Dual
VOL+	Vol+		Vol +
L/P	L/P		Info
MUTE	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -

