

 

 
 

 



 



 



 
 


 
 




 



 
 


 
 


 
 
 
 
 

 
 
 

 
 
 
 
 

 

 
 
 
 
 
 
 

 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power Xbox	 Power	 Up	 UP
 Power Tv	 SHIFT +  Shift + Power	 Down	 DOWN
 World	 MEDIA	 Right	 RIGHT
 Yellow/Y	 Yellow (C)	 Left	 LEFT
 Blue/X	 Blue (D)	 Guide	 -/-- / EPG
 Green/A	 Green (B)	 Back	 BACK
 Red/B	 Red (A)	 Vol+	 VOL +
 Play	 Play	 Vol-	 VOL -
 Pause	 Pause	 CH/PG+	 CH +
 >>	 Fast Forward	 CH/PG-	 CH -
 <<	 Rewind	 Mute	 MUTE
 I<	 First	 Last	 P/C / FAV
 >I	 Last	 Line Tv	 TV/R
 Menu	 MENU	 Input	 SRC
 Info	 INFO	 Disp	 VOD
 Rec	 Rec	 1	 1
 OK	 OK	 2	 2





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
3	3	3 DEF	3				
4	4	4 GHI	4				
5	5	5 JKL	5				
6	6	6 MNO	6				
7	7	7 PQRS	7				
8	8	8 TUV	8				
9	9	9 WXYZ	9				
0	0	0 _	0				

