



 
 
 

 

 

 

 



 
 

 




 



 


 




**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	List		List
	MTS/I/II		Dual
	Aspect		3D
	Display		Info

**Originalfernbedienung    Ersatzfernbedienung**

	PMode		Format
	SMode		Shift + Dual
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Source		AV
	Sleep		Sleep
	Auto		Options
	CH+		Ch +
	CH-		Ch -
	Red		Red



