



Originalfernbedienung    Ersatzfernbedienung

	PP		Back / Return
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P<P		Fav / Marker / PC
	0		0
	--		Guide / EPG / -/--
	Menu [M]		Menu / Home
	Info [i]		Info / Angle
	I-II		Audio / Lang I/II

Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	V -		Vol-
	V +		Vol+
	P -		CH- / Page-
	P +		CH+ / Page+
	Red / Sound		Red / Netflix / Search
	Red / Sound		Sound / Title
	Green / Picture		Green / APP / Repeat
	Green / Picture		Picture / Format
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	Text		Text / Goto





Originalfernbedienung    Ersatzfernbedienung

	[≡o]		Sleep / Timer
	Hold		Stop / Hold
	[≡X]		Exit / Cancel / Clear
	Mix / PIP Swap		Smart / List
	PIP / Size		Zoom / Size
	PIP Down / [≡?]		I<< / Preset-
	PIP Up / Index		>>I / Preset+
	[TV]		TV/Radio /
	[AV]		AV / Input / RDS

Originalfernbedienung    Ersatzfernbedienung


