
 
 

 

 


 

 
 
 

 
 

 
 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Nicam/Eject		Eject
	Mute		Mute
	Display	 + 	Shift + Info
	Sleep		Sleep
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Tv-Menu		Menu
	Source		AV
	DVD Setup		Options
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Red/Repaet		Red
	Green/Zoom		Green
	Yellow/Angle		Yellow
	Blue/Goto		Blue
	Text/Audio		Text
	Tv/Radio/Menu		TV/R
	Exit		Exit
	P.Mode	 + 	Shift + Format



