



 

 







 

 

 




 


 





 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Shift + 2
	STB		Shift + 3
	HTS		TV/Radio /
	Red / Demo		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / [I]		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Options		Setup / OPT /
	Options		Shift + Setup / OPT / Tools
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Back		Fav / Marker / PC
	Info		Info / Angle
	<<		<< / Tune-
	<<		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>		>>I / Preset+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Vol +		Vol+
	Vol -		Vol-
	Mute		Mute / Dimmer
	P +		CH+ / Page+
	P -		CH- / Page-
	[<I>] / Format		Picture / Format





Originalfernbedienung Ersatzfernbedienung

	Net TV	+ Shift + 1	
	Teletext		Text / Goto
	Disc Menu		D.Menu / Top
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subtitle / EQ
	Source		AV / Input / RDS
	Ambilight		Smart / List

Originalfernbedienung Ersatzfernbedienung

