
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[i+]		Info
	[1]2] Dual Screen		Smart
	Red / Demo		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Option		Options
	Guide		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu / Browse		Menu
	Text		Text
	Vol+		Vol +




 



Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	P<P		Back
	<<		<<





Originalfernbedienung **Ersatzfernbedienung**

	Stop / MHEG		Stop
	Play		Play
	>>		>>
	Rec		Rec
	FAV		Pre Ch

Originalfernbedienung **Ersatzfernbedienung**

