


















Originalfernbedienung Ersatzfernbedienung


















On/Off		Power
Mute		Mute / Dimmer
Still		Pause / Step / Freeze
Txt Stop		Stop / Hold
Tune-		<< / Tune-
Tune+		>> / Tune+
Contrast-		I<< / Preset-
Contrast+		>>I / Preset+
Color- S.Std		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Surround		Eject / Surround
Color+ P.Std		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung




 



 

On/Tim		Setup / OPT /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Swap		Back / Return
Volume+		Vol+
View		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media





Originalfernbedienung Ersatzfernbedienung

Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

Tone-		Shift + << /
Tone+		Shift + >> /
Bright- Sys		Shift + I<< / Preset-
Bright+ Mode		Shift + >>I / Preset+
Nicam/Mono		Shift + Audio / Lang I/II
4.# 16:9		Shift + Picture / Format
Aft/Caf		Shift + TV/Radio / Program
Off/Tim		Shift + Setup / OPT / Tools
Mix Scan		Shift + Text /
Game Coo		Shift + AV / Input / RDS
Store Text		Shift + Menu /
Browse		Shift + Info / Angle
Level L		Shift + Left
On Pip		Shift + OK
Level R/Woofers		Shift + Right
Back		Shift + Back / Return
Audio+		Shift + Vol+



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Update	 + 		Shift + CH+ /
Audio-	 + 		Shift + Vol-
Disp	 + 		Shift + Display / Media
Reveal	 + 		Shift + CH- /
3.*	 + 		Shift + 3
Search	 + 		Shift + Red / Netflix /

