

 


 



 

 


 


 
 
 
 

 
 
 













Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject
	Dimmer		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Exit
	Prog		Sleep
	Edit		Smart
	Time		AV
	Repeat		Text

Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Random		Options
	AMS		Dual
	A-B		TV/R
	Stop		Stop
	Play		Play
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Pause		Pause
	Vol+		Vol +
	Vol-		Vol -

