
 
 


 




Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject
	Display Off		Info
	Sound Mode		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep
	Cancel		Exit
	Repeat		Shift + Text
	AMS		Guide

Originalfernbedienung Ersatzfernbedienung

	Random		Smart
	A-B		TV/R
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Pause		Pause
	Time		AV
	Text		Text
	Menu		Menu
	Enter		Ok
	Scroll/Recall		Back
	Q.Replay		Subt

