






 

 






 




 
 
 
 






 

 


 




 
 
 


 
 
 

 
 
 
 
 


 





Originalfernbedienung Ersatzfernbedienung

	AMP Power		Power
	CD Power	 + 	Shift + Power
	OPT1		D. Menu
	Coax/CD		Yellow
	OPT2		Format
	Analog1		Red
	Analog2		Green
	iPod/USB		Blue
	USB-DAC		3D
	I<<		I<<
	Play		Play
	Pause		Pause
	>>I		>>I
	Stop		Stop
	Random		Media
	Repeat		Text
	Mode		Subt

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Dimmer		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung



 


 




 

 




 
 
 




 
 
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
+10	+10	GUIDE	Guide
CLEAR	Clear	EXIT	Exit
PROGRAM	Program	PROG SLEEP	Sleep
TIME	Time	TIMER AV	AV
Q.REPLAY	Q.Replay	SOUND DUAL	Dual
REPEAT A-B	A-B Repeat	SEARCH TV/R	TV/R

Originalfernbedienung Ersatzfernbedienung


 


 




 

 
 
 
 



 
 
 
 

 
 

 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	CD Power		Power
	AMP Power	 + 	Shift + Power
	OPT1		D. Menu
	OPT2		Format
	Coax/CD		Yellow
	Analog1		Red
	Analog2		Green
	iPod/USB		Blue
	USB-DAC		3D
	I<<		I<<
	Play		Play
	Pause		Pause
	>>I		>>I
	Stop		Stop
	Random		Media
	Repeat		Text
	Mode		Subt

 
 









 

 

 

 

 


Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Dimmer		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear		Exit
	Program		Sleep
	Time		AV
	Q.Replay		Dual
	A-B Repeat		TV/R

Originalfernbedienung Ersatzfernbedienung

