 





 





 

 






















Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	Phono		Shift + 7
	Tuner		Shift + 6
	CD		Shift + 3
	CDR/Tape		Shift + 5
	TV		Shift + 1
	VCR		Shift + 4
	SAT		Shift + 0
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

 
 



 



 




 



 


Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Nothing		Guide / EPG / -/-
	0		0
	Menu		Menu / Home
	Up		Up
	OK		OK
	Left		Left
	Right		Right
	Vol+		Vol+
	Down		Down
	Play		Play / Slow
	Vol-		Vol-
	i/News T/A		Info / Angle
	Stop		Stop / Hold
	I<<		I<< / Preset-
	Channel/Track		>>I / Preset+





**Originalfernbedienung    Ersatzfernbedienung**




 

 

 

	Loudness		Smart / List
	Sound		Sound / Title
	Pause/FR./D.		Pause / Step / Freeze
	Night		Sleep / Timer
	3D Surr.		TV/Radio /
	Surr. On/Off		Display / Media
	Sub Woofer+		CH+ / Page+
	Rear+		Shift + CH+ /
	Surr. Mode		Picture / Format
	Sub Woofer-		CH- / Page-
	Rear-		Shift + CH- /
	Test Tone		Zoom / Size

**Originalfernbedienung    Ersatzfernbedienung**






Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Nothing		Guide / EPG / -/--
	0		0
	Menu		Menu / Home
	Up		Up
	OK		OK

 

 



 






Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Right		Right
	Vol+		Vol+
	Down		Down
	Play		Play / Slow
	Vol-		Vol-
	i/News T/A		Info / Angle
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II
	Cancel		Exit / Cancel / Clear
	Pause		Pause / Step / Freeze
	T-C		TV/Radio /
	Disc		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	CD		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Nothing		Guide / EPG / -/--
	0		0
	Up		Up
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Down		Down
	Play		Play / Slow
	Vol-		Vol-
	i/News T/A		Info / Angle
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	:>/Cancel		Exit / Cancel / Clear
	Pause		Pause / Step / Freeze
	Disc		Blue / Prime Video / Random

