

























Originalfernbedienung Ersatzfernbedienung

|   |                |   |                    |
|---|----------------|---|--------------------|
|    | Power          |    | Power              |
|    | CBL/SAT        |    | 0                  |
|    | Media Player   |    | Guide / EPG / -/-- |
|    | Blu-ray/DVD    |    | 2                  |
|    | Game           |    | Fav / Marker / PC  |
|    | AUX            |    | 7                  |
|    | Tuner          |    | 6                  |
|    | Phono          |    | 5                  |
|    | TV Audio       |    | 1                  |
|    | CD             |    | 3                  |
|  | USB            |  | 8                  |
|  | Bluetooth      |  | 9                  |
|  | Internet Radio |  | 4                  |
|  | Heos           |  | Smart / List       |
|  | CH+            |  | CH+ / Page+        |
|  | ECO            |  | Zoom / Size        |
|  | Volume+        |  | Vol+               |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |               |
|---|------------|---|---------------|
|    | CH-        |    | CH- / Page-   |
|    | Mute       |    | Mute / Dimmer |
|    | Volume-    |    | Vol-          |
|    | Info       |    | Info / Angle  |
|    | Option     |    | Menu / Home   |
|    | Up         |    | Up            |
|    | Left       |    | Left          |
|    | Enter      |    | OK            |
|    | Right      |    | Right         |
|    | Back       |    | Back / Return |
|  | Down       |  | Down          |
|  | Setup      |  | Setup / OPT / |
|  | I<</Tune-  |  | I<< / Preset- |
|  | I<</Tune-  |  | << / Tune-    |
|  | Play/Pause |  | Play / Slow   |
|  | >>I/Tune+  |  | >>I / Preset+ |
|  | >>I/Tune+  |  | >> / Tune+    |











 
















**Originalfernbedienung    Ersatzfernbedienung**

|   |                |   |                    |
|---|----------------|---|--------------------|
|    | Power          |    | Power              |
|    | CBL/SAT        |    | 0                  |
|    | Media Player   |    | Guide / EPG / -/-- |
|    | Blu-ray/DVD    |    | 2                  |
|    | Game           |    | Fav / Marker / PC  |
|    | AUX            |    | 7                  |
|    | Tuner          |    | 6                  |
|    | Phono          |    | 5                  |
|    | TV Audio       |    | 1                  |
|   | CD             |   | 3                  |
|  | USB            |  | 8                  |
|  | Bluetooth      |  | 9                  |
|  | Internet Radio |  | 4                  |
|  | Heos           |  | Smart / List       |
|  | CH+            |  | CH+ / Page+        |
|  | Volume+        |  | Vol+               |
|  | CH-            |  | CH- / Page-        |

**Originalfernbedienung    Ersatzfernbedienung**

|   |                |   |                        |
|---|----------------|---|------------------------|
|    | Mute           |    | Mute / Dimmer          |
|    | Volume-        |    | Vol-                   |
|    | Up             |    | Up                     |
|    | Left           |    | Left                   |
|    | Enter          |    | OK                     |
|    | Right          |    | Right                  |
|    | Back           |    | Back / Return          |
|    | Down           |    | Down                   |
|    | I<</Tune-      |    | I<< / Preset-          |
|   | I<</Tune-      |   | << / Tune-             |
|  | Play/Pause     |  | Play / Slow            |
|  | >>I/Tune+      |  | >>I / Preset+          |
|  | >>I/Tune+      |  | >> / Tune+             |
|  | Band           |  | Display / Media        |
|  | Stop/Mode      |  | Stop / Hold            |
|  | Memory         |  | Eject / Surround       |
|  | Smart Select 1 |  | Red / Netflix / Search |



