




 


 
 






 






 





 




 

 
 
 


 


 

 



 



 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Back		Back
	Vol +		Vol +
	Vol -		Vol -
	Nicam / A2		3D
	Sleep		Sleep
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	Mode		Media
	TV / Radio		TV/R
	Freeze		Pause
	Subtitle		Subt
	Text		Text
	P.Mode		Shift + Format
	S.Mode		Dual





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
MIX	Mix	HOME SMART	Smart
HOLD	Hold		Stop
INDEX	Index	SHIFT + DISPLAY INFO	Shift + Info
SUBPAGE	Subpage	TIMER AV	AV
REVEAL	Reveal	E-MANUAL D.MENU	D. Menu
	Red	A	Red
	Green	B	Green
SIZE	Size	PICTURE FORMAT	Format
	Yellow	C	Yellow
	Blue	D	Blue
ZOOM	Zoom	ZOOM	Eject
FAV-CH	Fav-CH	FAV PRE-CH	Pre Ch
EPG	EPG	-/-- GUIDE	Guide
CH-LIST	CH List	DISC NAV LIST	List

