




**Originalfernbedienung    Ersatzfernbedienung**

	TV		Shift + 1
	AV.SV		AV / Input / RDS
	SCART1		Shift + 3
	PC		Shift + Fav / Marker / PC
	SCART2		Shift + 2
	Mute		Mute / Dimmer
	Up / P+		Up
	Up / P+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-
	Menu / Enter		OK
	Menu / Enter		Menu / Home
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / P-		Down
	Down / P-		CH- / Page-

**Originalfernbedienung    Ersatzfernbedienung**

	Text		Text / Goto
	Red		Red / Netflix / Search
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Green		Green / APP / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+100		Guide / EPG / -/-
	0		0
	RTN		Back / Return









Originalfernbedienung Ersatzfernbedienung

	RTN		Fav / Marker / PC
	Sound		Sound / Title
	PIP Source Up		Shift + Up
	Display		Display / Media
	PIP Position		Shift + Left
	PIP On/Off		Shift + OK
	PIP Size		Shift + Right
	APC		D.Menu / Top
	PIP Source		Shift + Down
	ARC		Setup / OPT /
	[ ]		Stop / Hold
	[≡i]		Play / Slow
	[ ↓ ]		>> / Tune+
	[≡?]		Pause / Step / Freeze
	[ ⊙ ]		I<< / Preset-
	[≡X]		<< / Tune-
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Reset		Smart / List
	Power		Power

