





 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	I-II		Audio / Lang I/II
	Scale		Smart / List
	Sleep		Sleep / Timer
	Display		Display / Media
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Jump		Back / Return

Originalfernbedienung Ersatzfernbedienung

	0		0
	ENT		Fav / Marker / PC
	Vol+		Vol+
	TV		TV/Radio /
	TV		Shift + 1
	CH+		CH+ / Page+
	Vol-		Vol-
	Input		AV / Input / RDS
	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	S.Mode		Sound / Title
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	P.Mode		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text Index		Info / Angle
	Text Reveal		Subtitle / EQ
	Text Size		Zoom / Size
	Text Hold		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

