
 





 










 




 






 


 











 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Txt Stop		Stop	
Reveal		Media	
Info	 + 	Shift + Info	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
Menu		Menu	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
Guide -/-- 1.		Guide	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
0/10			0
2.Fav P/C 2.			Pre Ch
Blue			Blue
Mix Scan			Shift + TV/R
Color+ P.Std			Shift + Dual
Bright+ Mode			List
Disp			3D
Tune-			<<
Tune+			>>
Bright- Sys			Options
Contrast+			Up
Color- S.Std			Format
Contrast-			Down
Surround			Red

