


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH List		Smart / List
	0		0
	Return/Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Home		D.Menu / Top
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	Vol+		Vol+
	Info		Info / Angle
	PR+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	PR-		CH- / Page-
	Rec		Rec / Rec Mode
	Nicam I/II		Audio / Lang I/II
	Text		Text / Goto
	AD/Subpage		Sound / Title





Originalfernbedienung Ersatzfernbedienung

	FAV/Size		Fav / Marker / PC
	FAV/Size		Zoom / Size
	Quick/Hold		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	Pause/Index		Pause / Step / Freeze
	<</Reveal		<< / Tune-
	>>/Mix		>> / Tune+
	Stop/Cancel		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

