
 

 



 
 
 
 
 

 
 
 




 
 






 
 







Originalfernbedienung Ersatzfernbedienung

 
 


 

 
On/Off		Power
Mute		Mute
Update		Smart
Reveal		Media
Txt Stop		Stop
Info	 + 	Shift + Info
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung

 
 
OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Mix Scan		Pause
On/Tim		Play
Blue		Blue
Audio+		List
Aft/Caf		Rec
Store Text	 + 	Shift + Text
Tone-		<<
Store		Options
Disp		3D

Originalfernbedienung Ersatzfernbedienung

Tone+		>>
AV 2	 + 	Shift + AV
Search	 + 	Shift + TV/R
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Input	 + 	Shift + Vol +
Contrast+	 + 	Shift + Ch +
Output	 + 	Shift + Vol -
Contrast-	 + 	Shift + Ch -
3.*	 + 	Shift + Guide
4.# 16:9		Format
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow
Level R/Woofer	 + 	Shift + Blue

