 



 



































 

 





 

 





















Originalfernbedienung Ersatzfernbedienung

	1-2-3 Menu		TV/Radio /
	Eject		Eject / Surround
	Encore		Smart / List
	Power		Power
	1		1
	2		2
	3		3
	Cancel		Exit / Cancel / Clear
	4		4
	5		5
	6		6
	SP/LP		Setup / OPT /
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0

Originalfernbedienung Ersatzfernbedienung

	OK/Prog		OK
	Data On Screen		Display / Media
	AV		AV / Input / RDS
	Vol+		Vol+
	Tv Channel+		CH+ / Page+
	Counter Reset		Back / Return
	Tv Power		Shift + Power
	Vol-		Vol-
	Tv Channel-		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Pause		Pause / Step / Freeze
	< Shuttle/Index		I<< / Preset-



