































































 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guía		Guide / EPG / -/-
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Back		Back / Return
	Voice		Sound / Title
	+		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	<<		<< / Tune-
	Play/Pause		Pause / Step / Freeze
	Play/Pause		Play / Slow
	>>		>> / Tune+
	I<		I<< / Preset-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

