
 
 




 

 




 













 

 
 
 

 

 











**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	Scan		Display / Media
	Swap		Back / Return
	Call		Shift + OK
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--



 



















 

 
 
 







**Originalfernbedienung    Ersatzfernbedienung**

	TV/AV		AV / Input / RDS
	P+		CH+ / Page+
	TV/DVD		Smart / List
	V-		Vol-
	Menu		Menu / Home
	V+		Vol+
	Exit		Exit / Cancel / Clear
	P-		CH- / Page-
	P.STD		Picture / Format
	Red/Picture		Shift + Picture / Format
	Red/Picture		Red / Netflix / Search
	Green/Sound		Sound / Title
	Green/Sound		Green / APP / Repeat
	Yellow/Time		Yellow / YouTube / Repeat
	Blue/Function		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+





**Originalfernbedienung**    **Ersatzfernbedienung**

	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Tune		Shift + TV/Radio / Program
	Up		Up
	Down		Down
	Program		TV/Radio /
	Zoom		Zoom / Size
	D.Call		Info / Angle
	[◆]		Shift + Zoom /
	[-]		D.Menu / Top
	[ / = ]		Shift + Text /
	[ = ]		Text / Goto
	[ X ]		Shift + Exit / Cancel / Clear
	[ ? ]		Setup / OPT /
	[ + ]		Subtitle / EQ
	Timer		Sleep / Timer
	>		Right

**Originalfernbedienung**    **Ersatzfernbedienung**







 

 













 

 

 
 










**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open / Close		Eject / Surround
	Scan		Shift + Setup / OPT / Tools
	Swap		Back / Return
	Call		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--

**Originalfernbedienung Ersatzfernbedienung**

	TV/AV		AV / Input / RDS
	I-II		Shift + Audio / Lang I/II
	P+		CH+ / Page+
	TV/DVD		Shift + 2
	TV/DVD		Shift + 1
	V-		Vol-
	Menu		Menu / Home
	V+		Vol+
	Exit		Exit / Cancel / Clear
	P-		CH- / Page-
	P.Std		Picture / Format
	Red / Picture		Red / Netflix / Search
	Red / Picture		Shift + Picture / Format
	Green / Sound		Green / APP / Repeat
	Green / Sound		Shift + Sound / Title
	Yellow / Time		Yellow / YouTube / Repeat
	Yellow / Time		Sleep / Timer





**Originalfernbedienung Ersatzfernbedienung**

	Blue / Function		Blue / Prime Video / Random
	Rev		<< / Tune-
	Fwd		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Setup		Setup / OPT /
	Pause / Step		Pause / Step / Freeze
	White / Tune		Display / Media
	D.Menu		D.Menu / Top
	Up		Up
	Repeat		Shift + Green / APP /
	A-B		Shift + Yellow / YouTube /
	Left		Left
	Play / Enter		Play / Slow
	Play / Enter		OK
	Right		Right

**Originalfernbedienung Ersatzfernbedienung**

	Slow		Shift + Play /
	Angle		Info / Angle
	Down		Down
	Title / PBC		Sound / Title
	Search		Shift + Red / Netflix /
	Audio		Audio / Lang I/II
	Program		TV/Radio /
	Zoom		Zoom / Size
	D.Call		Shift + Smart / List
	10+		Shift + Guide / EPG / -/-
	Caption		Subtitle / EQ
	Hold		Shift + Stop /
	[-]		Shift + TV/Radio / Program
	Mix		Shift + Text /
	Text		Text / Goto
	[X]		Shift + Exit / Cancel / Clear
	Reveal		Shift + Sleep / Timer





**Originalfernbedienung   Ersatzfernbedienung**

	Size	+	Shift + Zoom /
	Subcode	+	Shift + Subtitle / EQ
	>	+	Shift + Eject / Surround

**Originalfernbedienung   Ersatzfernbedienung**