






 





 

 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Menu		Menu
	EPG		Guide
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / V+		Right
	Right / V+		Vol +
	Left / V-		Left
	Left / V-		Vol -
	OK / Group		Ok
	<<		<<
	>>		>>
	I<<		I<<
	I>>		I>>
	Filelist		Smart
	Filelist		List
	Rec		Rec





**Originalfernbedienung Ersatzfernbedienung**

	Lang		Dual
	Time Shift		3D
	TV / Radio		TV/R
	Dev List		Media
	Stop		Stop
	Play / Pause		Play
	Zoom		Eject
	Subtitle		Subt
	Auto		Options
	Text		Text
	Red / Fav. / Daily		Red
	Green / Del. / Weekly		Green
	Yellow / Move / P.Info		Yellow
	Blue / Lock /		Blue
	Blue / Lock /		AV

**Originalfernbedienung Ersatzfernbedienung**