

 
 




 










































 

 

 



 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV/SAT		AV / Input / RDS
	TV/Radio		TV/Radio /
	Zoom		Zoom / Size
	List		Smart / List
	Audio		Audio / Lang I/II
	EPG		Guide / EPG / -/-
	Timer		Sleep / Timer
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	M/P		Display / Media
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Recall		Back / Return
	P+		>>I / Preset+
	P-		I<< / Preset-
	FAV		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

POWER DIMMER MUTE SHIFT
 TV DVD SAT AUX
 SLOW STEP-FREEZE HOLD REC MODE
 TUNE- TUNE+ PRESET- PRESET+
 TUNE- TUNE+ PRESET- PRESET+
 TITLE LANG VII EQ SURROUND
 SOUND AUDIO SUBTITLE
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 OK
 CLEAR RETURN
 EXIT BACK
 CANCEL
 LIST
 + VOL +
 - CH PAGE
 TV DVD CD-STR
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX-HDD USB BLUETOOTH
 7 8 9
 +- HDMI-SAT PC
 GUIDE 0 FAV MARKER
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
 Mandis shop
 www.mandis.tv



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SAT		Smart / List
	Info		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Zoom		Zoom / Size
	0 / Zoom		0
	Audio		Audio / Lang I/II
	Mute		Mute / Dimmer
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	Up / CH+		CH+ / Page+
	Down / CH-		Down
	Up / CH+		Up
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / CH-		CH- / Page-
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Blue / Pause		Blue / Prime Video / Random
	Blue / Pause		Pause / Step / Freeze
	Red / Text		Red / Netflix / Search
	Red / Text		Text / Goto
	Multivideo		Display / Media





 










Originalfernbedienung	Ersatzfernbedienung
	

















Pag. 4 / 8



Originalfernbedienung Ersatzfernbedienung

Mute		Mute / Dimmer
PWR On/Off		Power
App	 + 	Shift + Green / APP /
Epg		Guide / EPG / -/--
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
Audio		Audio / Lang I/II
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote	 + 	Shift + Guide / EPG / -/--













Originalfernbedienung Ersatzfernbedienung


















POWER **DIMMER MUTE** **SHIFT**
TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE
 TUNE- TUNE+ PRESET- PRESET+
 TITLE LANG VIII EQ SURROUND
 SOUND AUDIO SUBTITLE
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 CLEAR RETURN
 EXIT BACK
 CANCEL
 LIST
 + VOL - SMART
 MEDIA
 CH PAGE
 DISPLAY
 TV DVD CD-STD
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX-HDD USB BLUETOOTH
 7 8 9
 +/- HDMI-BAT PC
 GUIDE 0 FAV MARKER
 EPG
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
Mandis
 shop
 www.mandis.tv



Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Pause		Pause / Step / Freeze
Audio		Audio / Lang I/II
Zoom		Zoom / Size
Timer		Sleep / Timer
Tv/Radio		TV/Radio /
Text		Text / Goto
Tv/SAT		AV / Input / RDS
Menu		Menu / Home
Up/CH+		Up
Info		Info / Angle
Left		Left
OK		OK
Right		Right
Exit		Exit / Cancel / Clear
Down/CH-		Down

Originalfernbedienung Ersatzfernbedienung

Recall		Back / Return
Vol+		Vol+
List		Smart / List
P+		CH+ / Page+
Vol-		Vol-
M/P		Display / Media
P-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

The image shows a black universal remote control with a variety of buttons. At the top are power, dimmer/mute, and shift buttons. Below these are function buttons for TV, DVD, SAT, and AUX. The main section contains a grid of buttons for various functions like SLOW, STEP-FREEZE, HOLD, REC MODE, TUNE-, TUNE+, PRESET-, PRESET+, TITLE, LANG UI, EQ, SURROUND, SOUND, AUDIO, SUBTITLE, PROGRAM, FORMAT, SIZE, TIMER, TV/RADIO, PICTURE, ZOOM, SLEEP, AV INPUT, TOP MENU, OPT-TOOLS, GOTO, RDS, D.MENU, SETUP, and TEXT. In the center is a navigation pad with an OK button and four directional arrows. Below this are CLEAR, EXIT, CANCEL, LIST, SMART, MEDIA, DISPLAY, RETURN, and BACK buttons. A numeric keypad (0-9) is located below the center buttons, with additional functions like VIDEO, TAPE, TUNER, AUX-HDD, USB, BLUETOOTH, GUIDE EPG, HDMI-SAT, and FAV MARKER. At the bottom are buttons for NETFLIX, APP, YouTube, and Prime Video, along with SEARCH, REPEAT, REPEAT A-B, and RANDOM functions. The Mandis logo and website URL are at the very bottom.