



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+	 + 	Shift + Guide
	DVD/DVB		Smart
	USB		Media
	Tv/Radio		TV/R
	FAV/Clear		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	EPG/Prog		Guide
	Recall		Back
	Menu/Setup		Menu
	Info/OSD		Info
	Exit/Return		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	Enter		Ok
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I





Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Angle		Options
	Text/Title		Text
	Menu/PBC		D. Menu
	Goto		Format
	Rec		Rec
	Audio		Dual
	Subtitle		Subt
	Slow		AV
	Zoom		Shift + Eject
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung


