



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | [<>] |  | Format |
|  | ♪ |  | Dual |
|  | [] |  | 3D |
|  | PAT |  | Smart |
|  | PIP Sel |  | Play |
|  | PIP Pos |  | Pause |
|  | PIP Size |  | Stop |
|  | AV |  | AV |
|  | PC |  | Media |
|  | TV |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Zoom |  | Eject |
|  | Swap |  | Pre Ch |
|  | Swap |  | Back |
|  | PR- |  | Ch - |
|  | PR+ |  | Ch + |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | Up |  | Up |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Left |  | Left |
|  | OK / Freeze |  | Ok |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|-----------------------|------------|---------------------|---------|-----------------------|--|---------------------|--|
| | Info | | Info | | | | |
| | Menu | | Menu | | | | |
| | [+] | | Options | | | | |
| | [?] | | D. Menu | | | | |
| | [◆] | | Subt | | | | |
| | Red | | Red | | | | |
| | Green | | Green | | | | |
| | Yellow | | Yellow | | | | |
| | Blue | | Blue | | | | |
| | Text / Mix | | Text | | | | |
| | [≡x] | | Exit | | | | |
| | [≡:] | | Guide | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

