































**Originalfernbedienung Ersatzfernbedienung**

|               |   |                        |
|---------------|---|------------------------|
| Bright- Sys   |    | Down                   |
| Bright+ Mode  |    | Up                     |
| 4             |    | 4                      |
| Color- S.Std  |    | Sound / Title          |
| Tune+         |    | >> / Tune+             |
| Tune-         |    | <<< / Tune-            |
| Search        |    | Red / Netflix / Search |
| Color+ P.Std  |    | Picture / Format       |
| 2.Fav P/C 2.  |    | Fav / Marker / PC      |
| 0/10          |    | 0                      |
| Guide -/-- 1. |    | Guide / EPG / -/--     |
| 9             |  | 9                      |
| 8             |  | 8                      |
| 7             |  | 7                      |
| 6             |  | 6                      |
| 5             |  | 5                      |
| On/Off        |  | Power                  |

**Originalfernbedienung Ersatzfernbedienung**

|            |   |                       |
|------------|---|-----------------------|
| 3          |    | 3                     |
| 2          |    | 2                     |
| 1          |    | 1                     |
| Menu audio |    | Audio / Lang I/II     |
| Volume-    |    | Vol-                  |
| Volume+    |    | Vol+                  |
| Menu Off   |    | Exit / Cancel / Clear |
| Menu Right |    | Right                 |
| OK Enter   |    | OK                    |
| Menu Left  |    | Left                  |
| Menu       |    | Menu / Home           |
| TV/AV      |  | AV / Input / RDS      |
| Menu video |  | D.Menu / Top          |
| Subt.List  |  | Subtitle / EQ         |
| Mute       |  | Mute / Dimmer         |
|            |   |                       |
|            |   |                       |

