



Originalfernbedienung Ersatzfernbedienung

|   |       |   |                       |
|---|-------|---|-----------------------|
|    | Power |    | Power                 |
|    | 1     |    | 1                     |
|    | 2     |    | 2                     |
|    | 3     |    | 3                     |
|    | 4     |    | 4                     |
|    | 5     |    | 5                     |
|    | 6     |    | 6                     |
|    | 7     |    | 7                     |
|    | 8     |    | 8                     |
|    | 9     |    | 9                     |
|   | Text  |   | Text / Goto           |
|  | 0     |  | 0                     |
|  | Sub   |  | Subtitle / EQ         |
|  | <<    |  | << / Tune-            |
|  | Play  |  | Play / Slow           |
|  | Pause |  | Pause / Step / Freeze |
|  | >>    |  | >> / Tune+            |

Originalfernbedienung Ersatzfernbedienung

|   |       |   |                |
|---|-------|---|----------------|
|    | V+    |    | Vol+           |
|    | Rec   |    | Rec / Rec Mode |
|    | P+    |    | CH+ / Page+    |
|    | V-    |    | Vol-           |
|    | Mute  |    | Mute / Dimmer  |
|    | P-    |    | CH- / Page-    |
|    | =     |    | Setup / OPT /  |
|    | Up    |    | Up             |
|    | [→]   |    | TV/Radio /     |
|    | Left  |    | Left           |
|   | OK    |   | OK             |
|  | Right |  | Right          |
|  | ←     |  | Back / Return  |
|  | Down  |  | Down           |
|  | Home  |  | Menu / Home    |
|  | *     |  | D.Menu / Top   |
|  | Voice |  | Smart / List   |



