
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display		Info
	QV		Options
	Picture		Shift + Format
	Sound		Shift + Dual
	Source		AV
	EPG		Guide
	FAV +		>>
	FAV -		<<
	FAV		Pre Ch
	Menu		Menu
	Size		Format
	I/II / Top		Dual
	Exit		Exit
	Vol -		Vol -
	Vol +		Vol +



 
Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	CH -		Ch -
	CH +		Ch +
	Red / USB Left		Red
	Red / USB Left		Shift + Left
	Green / USB		Green
	Green / USB		Shift + Down
	Yellow / USB Up		Yellow
	Yellow / USB Up		Shift + Up
	Blue / USB Right		Blue
	Blue / USB Right		Shift + Right
	1		1
	2		2

 



 
 




 
 








Originalfernbedienung Ersatzfernbedienung

		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Originalfernbedienung Ersatzfernbedienung

		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

