



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	Radio / Angle		TV/R
	List/USB		List
	EPG/+10		Guide
	Still		Pause
	Aspect		Format
	OO/I/II Audio		Dual
	FAV+/Prog		Smart
	FAV-/Repeat		Media
	Info		Info
	Sleep		Sleep
	PIC		Shift + Format
	Sound		Shift + Dual
	Menu		Menu
	Exit		Exit

 
Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	CH-		Ch -
	CH+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Recall		Back
	Text/Left		Text
	Text/Left		Left
	Mix/Right		Shift + Text
	Mix/Right		Right
	[=o]/Subtitles		Subt
	Index / Play		Play
	Hold/I		I

 
 
 
 
 
 
 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Size/>>		>>
	Cancel/Stop		Stop
	Reveal/Open/Close/Rec		Rec
	Reveal/Open/Close/Rec		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Page-		Shift + Ch -
	Page+		Shift + Ch +
	Red/Goto		Red

**Originalfernbedienung    Ersatzfernbedienung**

	Green/Title		Green
	Yellow/Setup		Yellow
	Yellow/Setup		Options
	Blue/D.Menu		Blue
	Blue/D.Menu		D. Menu

