



 



 

 

 
 









 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Open		Eject / Surround
	Netflix		Shift + Red / Netflix /
	VUDU		Shift + Smart / List
	Pure Audio		Shift + Audio / Lang I/II
	Vol-		Vol-
	Vol+		Vol+
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Home		Menu / Home
	4		4
	5		5
	6		6
	Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Page-		CH- / Page-
	Clear		Exit / Cancel / Clear
	0		0
	Goto		Text / Goto
	Info		Info / Angle
	Top Menu		D.Menu / Top
	Up		Up
	Pop-Up Menu		Smart / List
	Left		Left
	Enter		OK
	Right		Right
	Option		Shift + Setup / OPT / Tools
	Down		Down
	Return		Back / Return





Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Dimmer		Shift + Mute / Dimmer
	Setup		Setup / OPT /
	AB Repeat		Shift + Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Repeat		Shift + Green / APP /
	Darbee		Display / Media
	Resolution		Shift + Display / Media
	Light		Picture / Format

