





 






 













Originalfernbedienung Ersatzfernbedienung

|   |            |   |                    |
|---|------------|---|--------------------|
|    | Power      |    | Power              |
|    | Mute       |    | Mute / Dimmer      |
|    | 1          |    | 1                  |
|    | 2          |    | 2                  |
|    | 3          |    | 3                  |
|    | 4          |    | 4                  |
|    | 5          |    | 5                  |
|    | 6          |    | 6                  |
|    | 7          |    | 7                  |
|    | 8          |    | 8                  |
|  | 9          |  | 9                  |
|  | TV / Radio |  | TV/Radio /         |
|  | 0          |  | 0                  |
|  | ←PR        |  | Back / Return      |
|  | EPG        |  | Guide / EPG / -/-- |
|  | Up / PR+   |  | Up                 |
|  | Up / PR+   |  | Shift + Up         |

Originalfernbedienung Ersatzfernbedienung

|   |                   |   |                            |
|---|-------------------|---|----------------------------|
|    | Menu              |    | Menu / Home                |
|    | Left / Vol-       |    | Shift + Left               |
|    | Left / Vol-       |    | Left                       |
|    | OK / List         |    | OK                         |
|    | OK / List         |    | Shift + OK                 |
|    | Right / Vol+      |    | Shift + Right              |
|    | Right / Vol+      |    | Right                      |
|    | Info              |    | Info / Angle               |
|    | Down / PR-        |    | Shift + Down               |
|    | Down / PR-        |    | Down                       |
|  | Exit              |  | Exit / Cancel / Clear      |
|  | Red / Audio       |  | Shift + Red / Netflix /    |
|  | Red / Audio       |  | Red / Netflix / Search     |
|  | Page+             |  | CH+ / Page+                |
|  | Yellow / Subtitle |  | Shift + Yellow / YouTube / |
|  | Yellow / Subtitle |  | Yellow / YouTube / Repeat  |
|  | Page-             |  | CH- / Page-                |





**Originalfernbedienung Ersatzfernbedienung**

|  |             |   |                              |
|--|-------------|---|------------------------------|
|  | Green / TXT | + | Shift + Green / APP / REPEAT |
|  | Green / TXT |   | Green / APP / Repeat         |
|  | Pause       |   | Pause / Step / Freeze        |
|  | Blue / L/R  |   | Blue / Prime Video / Random  |
|  | ::          |   | Text / Goto                  |
|  | FAV         |   | Fav / Marker / PC            |
|  | UHF         |   | Setup / OPT /                |
|  | PAL / NTSC  |   | D.Menu / Top                 |
|  | Record      |   | Rec / Rec Mode               |
|  | Play        |   | Play / Slow                  |
|  | Stop        |   | Stop / Hold                  |
|  | TV / AV     |   | AV / Input / RDS             |
|  | <<          |   | << / Tune-                   |
|  | >>          |   | >> / Tune+                   |
|  | < Seek      | + | Shift + << /                 |
|  | Seek >      | + | Shift + >> /                 |

**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

