 
 
 

 

 
 





 

 
 






Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Display		Display / Media
	DVD / BD		Shift + 2
	VCR / DVR		Shift + 4
	CBL/SAT		Shift + 0
	Game		Shift + 9
	AUX		Shift + 7
	TV / TAPE		Shift + 5
	TV / TAPE		Shift + 1
	TUNER		Shift + 6
	PORT		Shift + 8
	CD		Shift + 3
	Muting		Mute / Dimmer
	CH/Disc/Album		CH+ / Page+
	Vol+		Vol+
	CH/Disc/Album-		CH- / Page-
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Audio		Audio / Lang I/II
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Movie Tv		Red / Netflix / Search
	Music		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

 









 

 

 



 

 

 

 

 







	Game		Yellow / YouTube / Repeat
	Stereo		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/--/---10/Dimmer/D.Tun		Guide / EPG / -/--
	0/11		0
	CLR/Sleep/12		Fav / Marker / PC
	CLR/Sleep/12		Sleep / Timer
	CLR/Sleep/12		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

 



 

 



 

 

 

 

 

 

 

 

 

 

 








**Originalfernbedienung    Ersatzfernbedienung**

	Power BD/DVD		Power
	DVD/BD		Smart / List
	CBL/SAT		Display / Media
	Vol+ Receiver		Vol+
	Vol- Receiver		Vol-
	Top Menu		D.Menu / Top
	Up BD/DVD		Up
	Menu BD/DVD		Menu / Home
	Left BD/DVD		Left
	Enter BD/DVD		OK
	Right BD/DVD		Right
	Setup BD/DVD		Setup / OPT /
	Down BD/DVD		Down
	Return BD/DVD		Back / Return
	Audio BD/DVD		Audio / Lang I/II
	I<< BD/DVD		I<< / Preset-
	>>I BD/DVD		>>I / Preset+

**Originalfernbedienung    Ersatzfernbedienung**

	<< BD/DVD		<< / Tune-
	Play BD/DVD		Play / Slow
	>> BD/DVD		>> / Tune+
	Pause BD/DVD		Pause / Step / Freeze
	Stop BD/DVD		Stop / Hold
	Search BD/DVD		Red / Netflix / Search
	Repeat BD/DVD		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Play Mode		Yellow / YouTube / Repeat
	1 BD/DVD		1
	2 BD/DVD		2
	3 BD/DVD		3
	4 BD/DVD		4
	5 BD/DVD		5
	6 BD/DVD		6
	7 BD/DVD		7
	8 BD/DVD		8





Originalfernbedienung Ersatzfernbedienung

	9 BD/DVD		9
	+10/--/--10		Guide / EPG / --
	0/11 BD/DVD		0
	CLR/12 BD/DVD		Fav / Marker / PC
	CLR/12 BD/DVD		Exit / Cancel / Clear
	Power CBL/SAT		Shift + Power
	CH Disc/Album+ CBL/SAT		Shift + CH+ /
	CH Disc/Album- CBL/SAT		Shift + CH- /
	Guide CBL/SAT		Shift + Guide / EPG / --
	Up CBL/SAT		Shift + Up
	Menu/Prev CH CBL/SAT		Shift + Menu /
	Left CBL/SAT		Shift + Left
	Enter CBL/SAT		Shift + OK
	Right CBL/SAT		Shift + Right
	Setup CBL/SAT		Shift + Setup / OPT / Tools
	Down CBL/SAT		Shift + Down
	Return CBL/SAT		Shift + Back / Return

 

 





 



 

 









 







 

Originalfernbedienung Ersatzfernbedienung

	<< CBL/SAT		Shift + << /
	Play CBL/SAT		Shift + Play /
	>> CBL/SAT		Shift + >> /
	Pause CBL/SAT		Shift + Pause / Step /
	Stop CBL/SAT		Shift + Stop /
	Movie Tv/Search CBL/SAT		Shift + Red / Netflix /
	Music/Repeat CBL/SAT		Shift + Green / APP /
	Game/Random		Shift + Yellow / YouTube /
	Stereo/Play Mode CBL/SAT		Shift + Blue / Prime
	1 CBL/SAT		Shift + 1
	2 CBL/SAT		Shift + 2
	3 CBL/SAT		Shift + 3
	4 CBL/SAT		Shift + 4
	5 CBL/SAT		Shift + 5
	6 CBL/SAT		Shift + 6
	7 CBL/SAT		Shift + 7
	8 CBL/SAT		Shift + 8



 


 
 
 

 

 

 

 



 

 

 
 

 








**Originalfernbedienung    Ersatzfernbedienung**

	Power CD		Power
	CD		Smart / List
	CH/Disc+ CD		CH+ / Page+
	Vol+ Receiver		Vol+
	CH/Disc- CD		CH- / Page-
	Vol- Receiver		Vol-
	Up CD		Up
	Left CD		Left
	Enter CD		OK
	Right CD		Right
	Setup CD		Setup / OPT /
	Down CD		Down
	Return CD		Back / Return
	Audio CD		Audio / Lang I/II
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	<< CD		<< / Tune-

**Originalfernbedienung    Ersatzfernbedienung**

	Play CD		Play / Slow
	>> CD		>> / Tune+
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	Search CD		Red / Netflix / Search
	Repeat CD		Green / APP / Repeat
	Random CD		Blue / Prime Video / Random
	Play Mode CD		Yellow / YouTube / Repeat
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9





**Originalfernbedienung    Ersatzfernbedienung**

	+10/--/--10/D.Tun/ Dimmer CD		Guide / EPG / -/--
	0/11 CD		0
	CLR/Sleep/12		Fav / Marker / PC

**Originalfernbedienung    Ersatzfernbedienung**






**Originalfernbedienung    Ersatzfernbedienung**

	Power Receiver Zone 2		Power
	CH Disc/Album+ Zone 2		CH+ / Page+
	Vol+ Zone 2		Vol+
	CH Disc/Album- Zone 2		CH- / Page-
	Vol- Zone 2		Vol-
	Up Zone 2		Up
	Left Zone 2		Left
	Enter Zone 2		OK
	Right Zone 2		Right
	Setup Zone 2		Setup / OPT /
	Down Zone 2		Down
	Return Zone 2		Back / Return
	Audio Zone 2		Audio / Lang I/II
	I<< Zone 2		I<< / Preset-
	>>I Zone 2		>>I / Preset+
	<< Zone 2		<< / Tune-
	Play Zone 2		Play / Slow

**Originalfernbedienung    Ersatzfernbedienung**





	>> Zone 2		>> / Tune+
	Pause Zone 2		Pause / Step / Freeze
	Stop Zone 2		Stop / Hold
	Movie Tv Zone		Red / Netflix / Search
	Music Zone 2		Green / APP / Repeat
	Game Zone 2		Yellow / YouTube / Repeat
	Stereo Zone 2		Blue / Prime Video / Random
	1 Zone 2		1
	2 Zone 2		2
	3 Zone 2		3
	4 Zone 2		4
	5 Zone 2		5
	6 Zone 2		6
	7 Zone 2		7
	8 Zone 2		8
	9 Zone 2		9
	+10/--/--10/D.Tun/Dimmer Zone 2		Guide / EPG / -/-







Originalfernbedienung    Ersatzfernbedienung

	0/11 Zone 2		0
	CLR/Sleep/12		Fav / Marker / PC

Originalfernbedienung    Ersatzfernbedienung