



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok

Originalfernbedienung    Ersatzfernbedienung

	OK		Shift + Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Page-		Shift + Ch -
	Page+		Shift + Ch +
	FAV		Pre Ch
	Guide		Guide
	i		Info
	NTSC / PAL		Smart
	Pause		Pause
	Audio		Dual
	Radio		TV/R
	Audio LR		Options



