 
 
 
 
 

 
 
 
 



 

 




 
 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	3D		3D
	Input Tv		TV/R
	Input AV		Media
	Menu		Menu
	Exit		Exit
	[≡]/Text		Text
	[≡◆]/STTL		Subt
	[+]/Aspect		Format
	i		Info
	APPS		Sleep
	Home		Smart
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left

 
Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Option		Options
	Back/Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6 _{mno}	6		6
7 _{pqrs}	7		7
8 _{tuv}	8		8
9 _{wxyz}	9		9
0	0		0
 ?	?/Help	 SOUND DUAL	Dual
	Last View	 FAV PRE-CH	Pre Ch
	<<		<<
	Play		Play
	>>		>>
	l<<		l<<
	Pause		Pause
	>>l		>>l
	Stop		Stop
	Rec		Rec

Originalfernbedienung Ersatzfernbedienung

