

 

 



 



 

 



 





 





 



 


 
 









 



 

 



 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Off Timer		Sleep / Timer
	Input Tv		Shift + AV / Input / RDS
	Input AV		AV / Input / RDS
	Menu		Menu / Home
	[+]/Aspect		Picture / Format
	N		D.Menu / Top
	OO/Surround		Eject / Surround
	i		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Viera Tools		Display / Media
	Internet		Smart / List
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Option		Setup / OPT /
	Down		Down
	Return/Back		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡◆]/STTL		Subtitle / EQ
	[≡i]/Index		Sound / Title
	[≡+]/Hold		Shift + Stop /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



