



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Sleep / Auto Off		Sleep
	Clock / Timer		AV
	Play / Rec		Rec
	Disc		Pre Ch
	1 / Disc 1		1
	2 / Disc 2		2
	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>≡ 10		Guide
	Del		Exit

Originalfernbedienung    Ersatzfernbedienung

	Program		Shift + Sleep
	Play Mode		Shift + Play
	Music Port		Media
	CD Play / Pause		Play
	Tape Play		Green
	USB Play / Pause		Yellow
	FM / AM		Red
	Stop / Clear		Stop
	Vol -		Vol -
	Vol +		Vol +
	Album -		Left
	Album +		Right
	I<< / <<<		I<<
	I<< / <<<		<<<
	I<< / <<<		Down
	>>I / >>> / Up		>>I
	>>I / >>> / Up		>>>





**Originalfernbedienung**    **Ersatzfernbedienung**

^/FF	>>  / >> / Up	▲	Up
RE-MASTER	Re-Master	HOME SMART	Smart
MANUAL EQ	Manual EQ	+ CH	Ch +
D.BASS	D.Bass	SOUND DUAL	Dual
DISPLAY-DIMMER	Display - Dimmer	DISPLAY INFO	Info
REPEAT	Repeat	REPEAT TEXT	Text
PRESET EQ	Preset EQ	CH -	Ch -
MUTING	Muting	MUTE	Mute

**Originalfernbedienung**    **Ersatzfernbedienung**


