


 

 



 

 

 

 

 

 

 



 










 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10		Guide
	>/Option		Options
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Slow/Search >>		>>
	<< Slow/Search		<<
	>>I/Skip Up		>>I
	I<</Skip Down		I<<
	Play DVD/CD		Play
	Play USB		Red
	FM/AM/Ext-In		TV/R
	Top Menu/Direct Navigator		Shift + Menu
	Start		Blue
	Menu/Play List		Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Functions		Pre Ch




Originalfernbedienung Ersatzfernbedienung

	Setup		D. Menu
	Sound		Dual
	Cancel		Exit
	Play Mode/Repeat		Text
	Sleep/Timer Play		Sleep
	Clock/Timer		AV
	Muting		Mute
	FL Display		Info
	One Touch Play		Smart
	Power Tv		Shift + Power
	TV/AV Tv		Shift + AV
	Vol+ Tv		Shift + Vol +
	Vol- Tv		Shift + Vol -

Originalfernbedienung Ersatzfernbedienung

