
 
 

 

 

 


 
 


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto Setup		Auto
	Computer 1		Comp / Video
	Computer 2		Shift + Comp / Video
	Video		Mode
	HDMI 1		Source
	HDMI 2		Shift + Source
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Function		Volt / Focus
	Return		Shift + Enter
	Enter		Enter
	Menu		Menu
	Default		Help / Info
	Freeze		Freeze / Timer

Originalfernbedienung Ersatzfernbedienung

	Mute		Blank / Mute
	D.Zoom+/1		+ / Play
	D.Zoom-/4		- / Stop
	ID Set		3D / Invert
	ID All		Shift + 3D / 3D /
	Vol+/2		Vol + / Page +
	Vol-/5		Vol - / Page -
	Screen ADJ/6		Eco / Aspect
	AV Mute		Shift + Blank / Mute
	P-Timer/3		Shift + Freeze / Timer

