

 

 



 
 
 





 

 

 

 

 





 









 











 



 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD (Universal Mode)		Shift + 2
	STB (Universal Mode)		Shift + 3
	HTS (Universal Mode)		Shift + 4
	Red/Demo		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/[I]		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	[i]/Info		Info / Angle
	<<		<< / Tune-
	Play/Pause		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	[<>]/Format		Picture / Format
	PR-		CH- / Page-
	Net TV		Smart / List
	Teletext		Text / Goto
	Disc Menu		D.Menu / Top
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

3 DEF	3	3 CD - STB	3
4 GHI	4	4 VIDEO	4
5 JKL	5	5 TAPE	5
6 MNO	6	6 TUNER	6
7 PQRS	7	7 AUX - HDD	7
8 TUV	8	8 USB	8
9 WXYZ	9	9 BLUETOOTH	9
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
0 . @	0	0 HDMI - BAT	0
	Source	RDS AV INPUT	AV / Input / RDS
	Ambilight	MEDIA DISPLAY	Display / Media

Originalfernbedienung Ersatzfernbedienung

