


 
 















**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	(([/ ])		Zoom / Size
	*		D.Menu / Top
	[<>]		Picture / Format
	Tv Guide		Guide / EPG / -/-
	Search		Shift + Red / Netflix /
	Sources		AV / Input / RDS
	Smart Tv		Smart / List
	Home		Menu / Home
	Exit/Tv		Exit / Cancel / Clear
	Red		Red / Netflix / Search

**Originalfernbedienung Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i+/Info		Info / Angle
	Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Multiview		Display / Media
	Vol+		Vol+
	List		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Subtitle	Subtitle / EQ
0	0
Text	Text / Goto

Originalfernbedienung Ersatzfernbedienung