


 
 



 

 
 

 

 

 

 

 




 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	Input		AV
	DVD		Smart
	VCR		Media
	TV / VCR		TV/R
	Setup		Menu
	Disc Menu		D. Menu
	Up / PR/TRK +		Up
	Up / PR/TRK +		Ch +
	Down / PR/TRK -		Down
	Down / PR/TRK -		Ch -
	Right		Right
	Left		Left
	OK		Ok
	Display		Info
	Back		Back

Originalfernbedienung Ersatzfernbedienung

	Pause / Step		Pause
	I<< Prev		I<<
	>>I Next		>>I
	Stop		Stop
	<< Rew		<<
	Play		Play
	>> FFW		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0







 







 

 





 

 







 
 
 


Originalfernbedienung Ersatzfernbedienung

	Program		Sleep
	Clear		Exit
	Audio		Dual
	Subtitle		Subt
	Angle		Format
	Zoom	+	Shift + Eject
	Marker		Pre Ch
	Repeat		Text
	Repeat A-B	+	Shift + Text
	Shuffle / Skip		3D
	Search	+	Shift + TV/R
	Title / Speed		List

 



 



 

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	Input		AV
	DVD		Smart
	VCR		Media
	TV / VCR		TV/R
	Setup		Menu
	Up / PR/TRK +		Up
	Up / PR/TRK +		Ch +
	Down / PR/TRK -		Down
	Down / PR/TRK -		Ch -
	Right		Right
	Left		Left
	OK		Ok
	Display		Info
	Pause / Step		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	<< Rew		<<
	Play		Play
	>> FFW		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Marker		Pre Ch
	Record		Rec
	Search		Shift + TV/R





Originalfernbedienung **Ersatzfernbedienung**

	Showview / Video Plus +		Options

Originalfernbedienung **Ersatzfernbedienung**

