

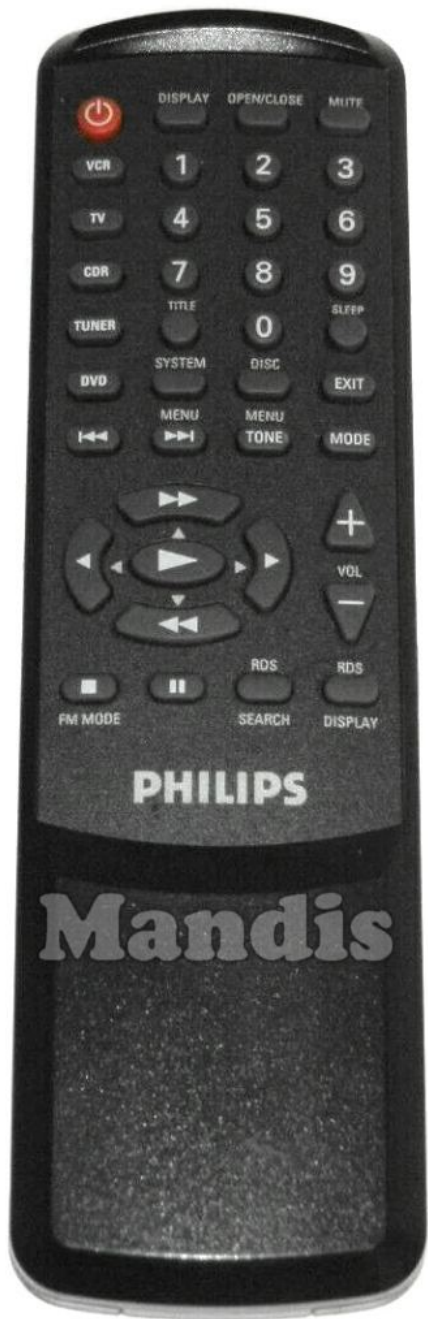

**Originalfernbedienung**
**Ersatzfernbedienung**

	Power		Power
	Di spl ay		Di spl ay / Medi a
	Open / Cl ose		Ej ect / Sur round
	Mut e		Mut e / Di mmer
	VCR		Shi ft + 4
	TV		Shi ft + 1
	CDR		Shi ft + 3
	Tuner		Shi ft + 6
	DVD		Shi ft + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

**Originalfernbedienung**
**Ersatzfernbedienung**

	9		9
	Ti tle		Sound / Ti tle
	0		0
	Sl eep		Sl eep / Ti mer
	Syst em Menü		Menü / Home
	Di sc Menü		D. Menü / Top
	Exi t		Exi t / Cancel / Cl ear
	l <<		l << / Preset -
	>>		>> / Preset +
	Tone		Audi o / Lang I/II
	Mbde		Smart / Li st
	Up / >>		Up
	Up / >>		>> / Tune+
	Vol +		Vol +
	Left		Left
	Pl ay		Pl ay / Sl ow
	Pl ay		OK





**Originalfernbedienung   Ersatzfernbedienung**

	Ri ght		Ri ght
	Vol -		Vol -
	Down / <<		<< / Tune-
	Down / <<		Down
	St op / FM Mbd e		St op / Hol d
	Pause		Pause / Step / Freeze
	RDS / Searc h		Red / Netfli x / Search
	RDS / Searc h		AV / I nput / RDS
	RDS Di spl ay		I nf o / Angl e
	RDS Di spl ay		Gr een / APP / Repeat

**Originalfernbedienung   Ersatzfernbedienung**