

 



 





| Originalfernbedienung | Ersatzfernbedienung |
|--|--|
|  Power |  Power |
|  Eject |  Eject / Surround |
|  Bluetooth/Dock |  9 |
|  FM/CD |  3 |
|  Audio In/USB |  AV / Input / RDS |
|  Up |  Up |
|  Down |  Down |
|  >>I |  >>I / Preset+ |
|  I<< |  I<< / Preset- |
|  OK |  OK |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Mute |  Mute / Dimmer |
|  Play/Pause |  Play / Slow |
|  Menu |  Menu / Home |
|  RDS/Display |  Display / Media |
|  Repeat/Shuffle |  Green / APP / Repeat |

| Originalfernbedienung | Ersatzfernbedienung |
|---|---|
|  Prog |  TV/Radio / |
|  Sound |  Sound / Title |
|  Clock |  Sleep / Timer |
|  Sleep/Timer |  Setup / OPT / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

