

 



 

 

 

 

 



 










 


 



 

 



 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Disc/Menu		Menu / Home
	Eject		Eject / Surround
	Display		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Return/Title		Back / Return
	Setup		Setup / OPT /
	I<<		I<< / Preset-
	Play/Pause		Play / Slow
	>>I		>>I / Preset+
	Stop		Stop / Hold
	USB		Shift + 8
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subtitle / EQ
	Audio/Create MP3		Audio / Lang I/II
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat

