 




 


 
 
 




 
 
 

 




 












 





 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------|---|-------|
|  | Standby / On |  | Power |
|  | TV |  | 1 |
|  | BD / DVD |  | 2 |
|  | STB |  | 3 |
|  | Analog |  | 4 |
|  | BT Audio |  | Smart |
|  | Surround |  | Subt |
|  | Dialog |  | Dual |
|  | Auto Level |  | List |
|  | Night |  | Sleep |
|  | Up / Volume + |  | Up |
|  | Up / Volume + |  | Vol + |
|  | Down / Volume |  | Down |
|  | Down / Volume |  | Vol - |
|  | Right / Subwoofer Vol + |  | Right |
|  | Right / Subwoofer Vol + |  | Ch + |
|  | Dimmer |  | TV/R |

 







 

 

 
 
 
 

 

 









 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|------|
|  | Left / Subwoofer Vol - |  | Left |
|  | Left / Subwoofer Vol - |  | Ch - |
|  | Mute |  | Mute |
|  | Lip Sync |  | 3D |
|  | Status |  | Info |

 

 
 

 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------|---|-------|
|  | Standby / On |  | Power |
|  | TV |  | 1 |
|  | BD / DVD |  | 2 |
|  | STB |  | 3 |
|  | Analog |  | 4 |
|  | BT Audio |  | Smart |
|  | Surround |  | Subt |
|  | Dialog |  | Dual |
|  | Auto Level |  | List |
|  | Night |  | Sleep |
|  | Up / Volume + |  | Up |
|  | Up / Volume + |  | Vol + |
|  | Down / Volume |  | Down |
|  | Down / Volume |  | Vol - |
|  | Right / Subwoofer Vol + |  | Right |
|  | Right / Subwoofer Vol + |  | Ch + |
|  | Dimmer |  | TV/R |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|------|
|  | Left / Subwoofer Vol - |  | Left |
|  | Left / Subwoofer Vol - |  | Ch - |
|  | Mute |  | Mute |
|  | Lip Sync |  | 3D |
|  | Status |  | Info |

