







 





 


 
 
 
 


 

 



 



 
 

 



 

 
 






 


 
 







Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Function		AV
	Open / Close		Eject
	Karaoke		TV/R
	Key / Echo		Guide
	NET Contents		Media
	YouTube		Shift + Media
	Sleep		Sleep
	Exit		Exit
	Mic Vol +		Ch +
	Mic Vol -		Ch -
	Home Media		Shift + Smart
	Dimmer		Shift + Mute
	CD / SACD		D. Menu
	Display		Info
	USB REC		Rec
	Sound		Shift + Dual











 
 


 





Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Top Menu		Shift + Menu
	Menu / PopUp		Menu
	Home Menu		Smart
	Up		Up
	Left		Left
	Return		Back
	Enter		Ok
	Right		Right
	Down		Down
	Resolution		Format
	Replay		Shift + Play
	Continued		List
	Tools		Options
	Skip Search		Shift + Right





Originalfernbedienung Ersatzfernbedienung

	<< REV		<<
	Play		Play
	>> FWD		>>
	I<< / <II / <I		I<<
	Pause		Pause
	Stop		Stop
	>>I / I> / II>		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Clear		Shift + Exit
	Repeat		Text
	Subtitle		Subt
	Angle		Shift + Format
	Virtual 3D Sound		3D
	A-B		Shift + Text
	Program / Red		Red
	Program / Red		Shift + Sleep
	RDS / Bookmark / Green		Green
	Audio		Dual
	RDS / Bookmark / Green		Pre Ch
	PTY / Zoom /		Yellow
	PTY / Zoom /		Shift + Eject
	Index / Blue		Blue

