



 




Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Function		Smart
	Volume-		Vol -
	Volume+		Vol +
	TAPE2 Rec		Shift + Rec
	TAPE2 Stop		Shift + Ok
	TAPE1 Stop		Ok
	TAPE1 Rev. Play		Left
	TAPE2 Rev. Play		Shift + Left
	TAPE1 Play		Right
	TAPE2 Play		Shift + Right
	TAPE1 <<		Down
	TAPE2 <<		Shift + Down
	TAPE1 >>		Up
	TAPE2 >>		Shift + Up
	CD <<		<<
	CD >>		>>

Originalfernbedienung Ersatzfernbedienung

	CD Disc		List
	CD Stop		Stop
	CD Pause		Pause
	CD Play		Play
	CD I<<		I<<
	Tuner Station -		Ch -
	CD >>I		>>I
	Tuner Station +		Ch +
	TUNER Scan		Menu
	CD PGM		Options
	TUNER FM		Info
	CD Random		Dual
	CD 1		1
	TUNER 1		Shift + 1
	CD 2		2
	TUNER 2		Shift + 2
	CD 3		3



